
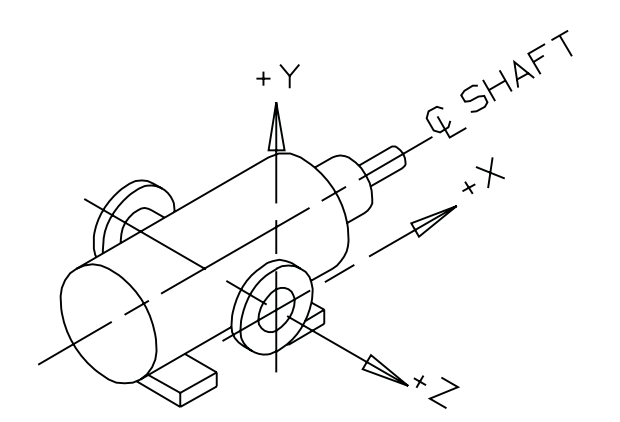
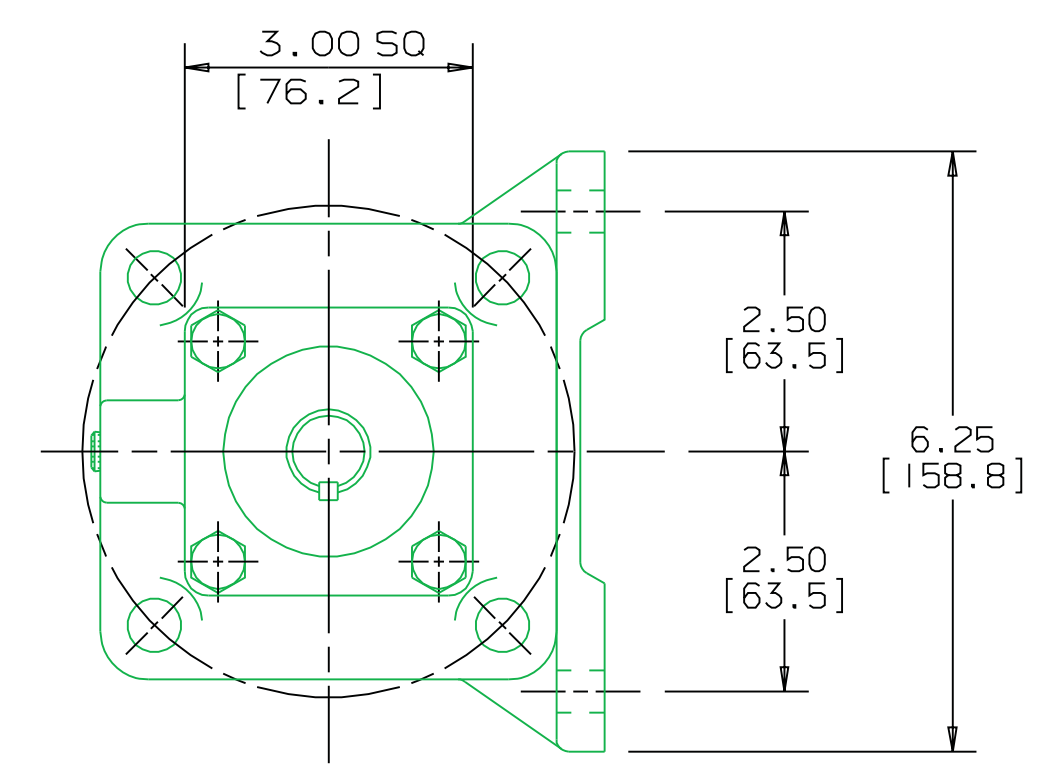


REVISION HISTORY						
CHG NO	ZONE	REV	DESCRIPTION	DATE	BY	APPROVED
96-00043	B	2	ADDED GENERIC OUTLINE DATA BLOCK	1-24-96	DMS	MJC
99-00000	ALL	2	REVISED FOR APPV'D ANSI FORMAT	06-25-99	JTT	ERH
00-0579	ALL	3	UPDATED TO CURRENT STANDARDS	9-25-00	DMM	DMM

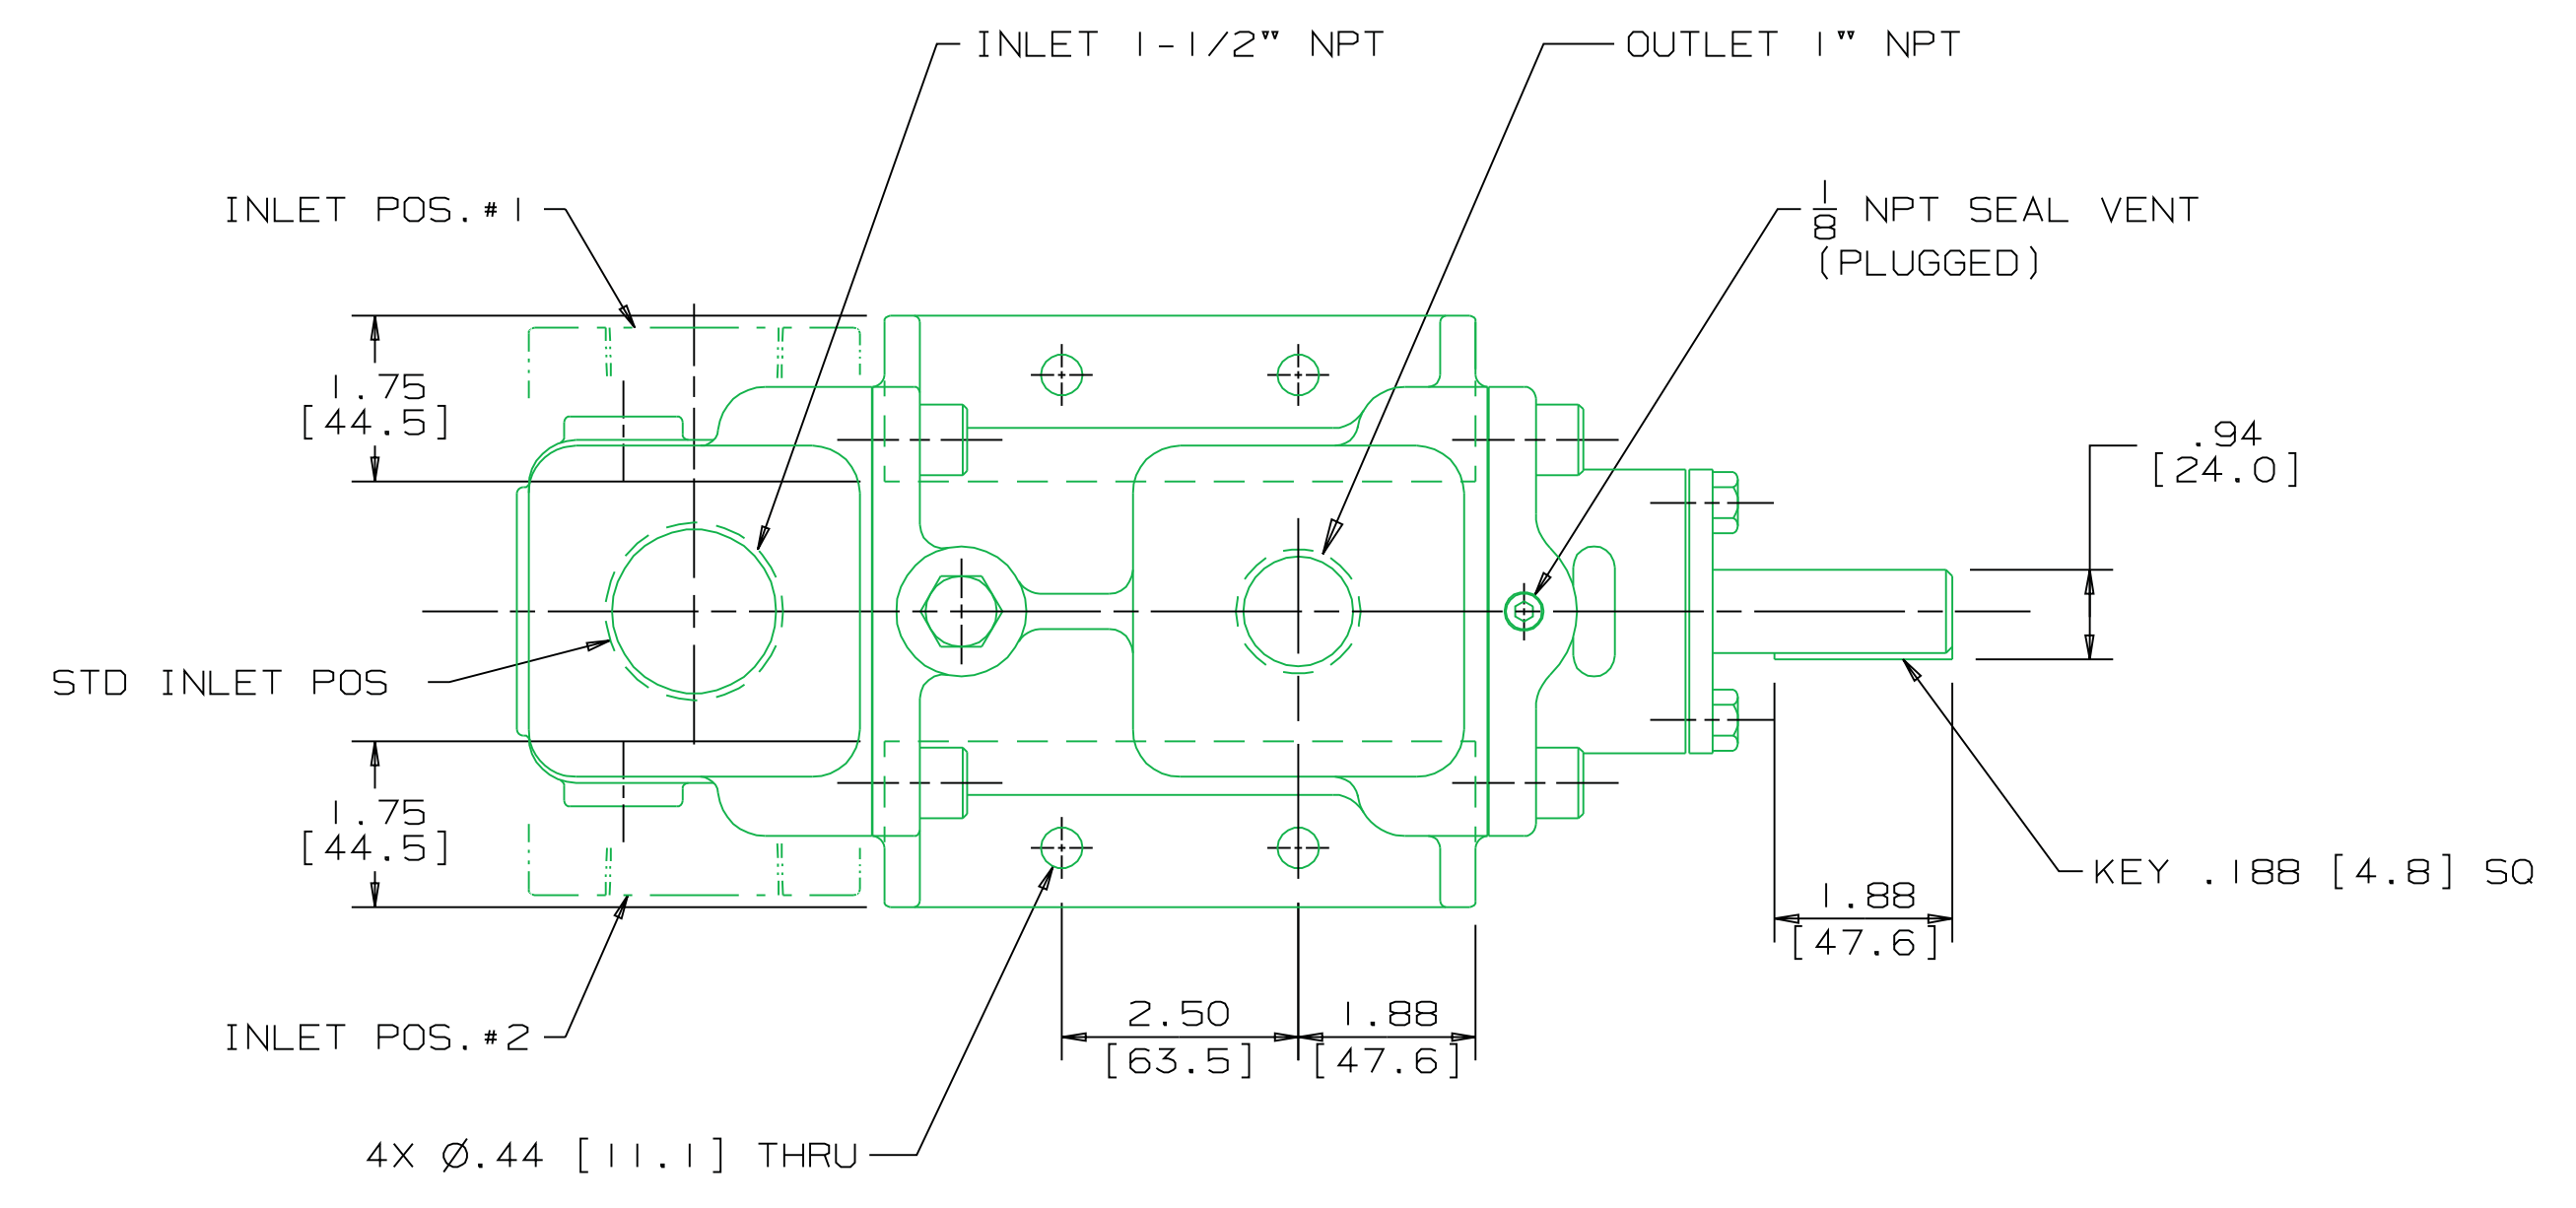

COORDINATE SYSTEM FOR MAXIMUM PUMP FORCES (F) AND MOMENTS (M)


INLET:  
 FX=113 LBF [500 N]    MX=188 LB FT [254 N·m]  
 FY=113 LBF [500 N]    MY=188 LB FT [254 N·m]  
 FZ=113 LBF [500 N]    MZ=188 LB FT [254 N·m]

OUTLET:  
 FX=75 LBF [334 N]    MX=125 LB FT [169 N·m]  
 FY=75 LBF [334 N]    MY=125 LB FT [169 N·m]  
 FZ=75 LBF [334 N]    MZ=125 LB FT [169 N·m]

FORCE AND MOMENT VALUES ARE RELATIVE TO CENTER OF INLET AND OUTLET PORT FACES.

DRAWING CERTIFICATION	
CUSTOMER NAME	-----
CUSTOMER PO NUMBER	-----
CUSTOMER PART NUMBER	-----
BOM NUMBER	-----
PUMP TYPE	-----
SHAFT ROTATION	-----
INLET PORT POSITION	-----
OTHER INFORMATION	
CERTIFIED BY	-----
CERTIFIED DATE	-----
IMO ORDER NUMBER	-----
DATA REVISION NUMBER	-----

- NOTES:
- UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS ARE IN INCHES. DIMENSIONS IN [ ] ARE MILLIMETERS.
  - TO MAXIMIZE SEAL LIFE, SEAL VENT MUST BE ORIENTED UPWARD (12 O'CLOCK) WHEN PUMP IS INSTALLED HORIZONTALLY. THIS IS NORMAL VENT ORIENTATION WHEN PUMP FEET ARE ORIENTED DOWNWARD. SEAL VENT ORIENTATION IS NOT CRITICAL WHEN PUMP IS INSTALLED WITH SHAFT VERTICALLY UPWARD.
  - PORT, FOOT, AND SEAL VENT ORIENTATIONS ARE SUPPLIED AS SHOWN ON DRAWING UNLESS OTHERWISE SPECIFIED.
  - ALTERNATE INLET PORT POSITIONS ARE PROVIDED IF SPECIFIED ON ORDER. AVAILABLE POSITIONS ARE: STANDARD, POSITION #1, POSITION #2 OR POSITION #3. ALL INLET PORT POSITIONS ARE RELATIVE TO OUTLET PORT.
  - ESTIMATED WEIGHT 44 LBS [20.0 kg].

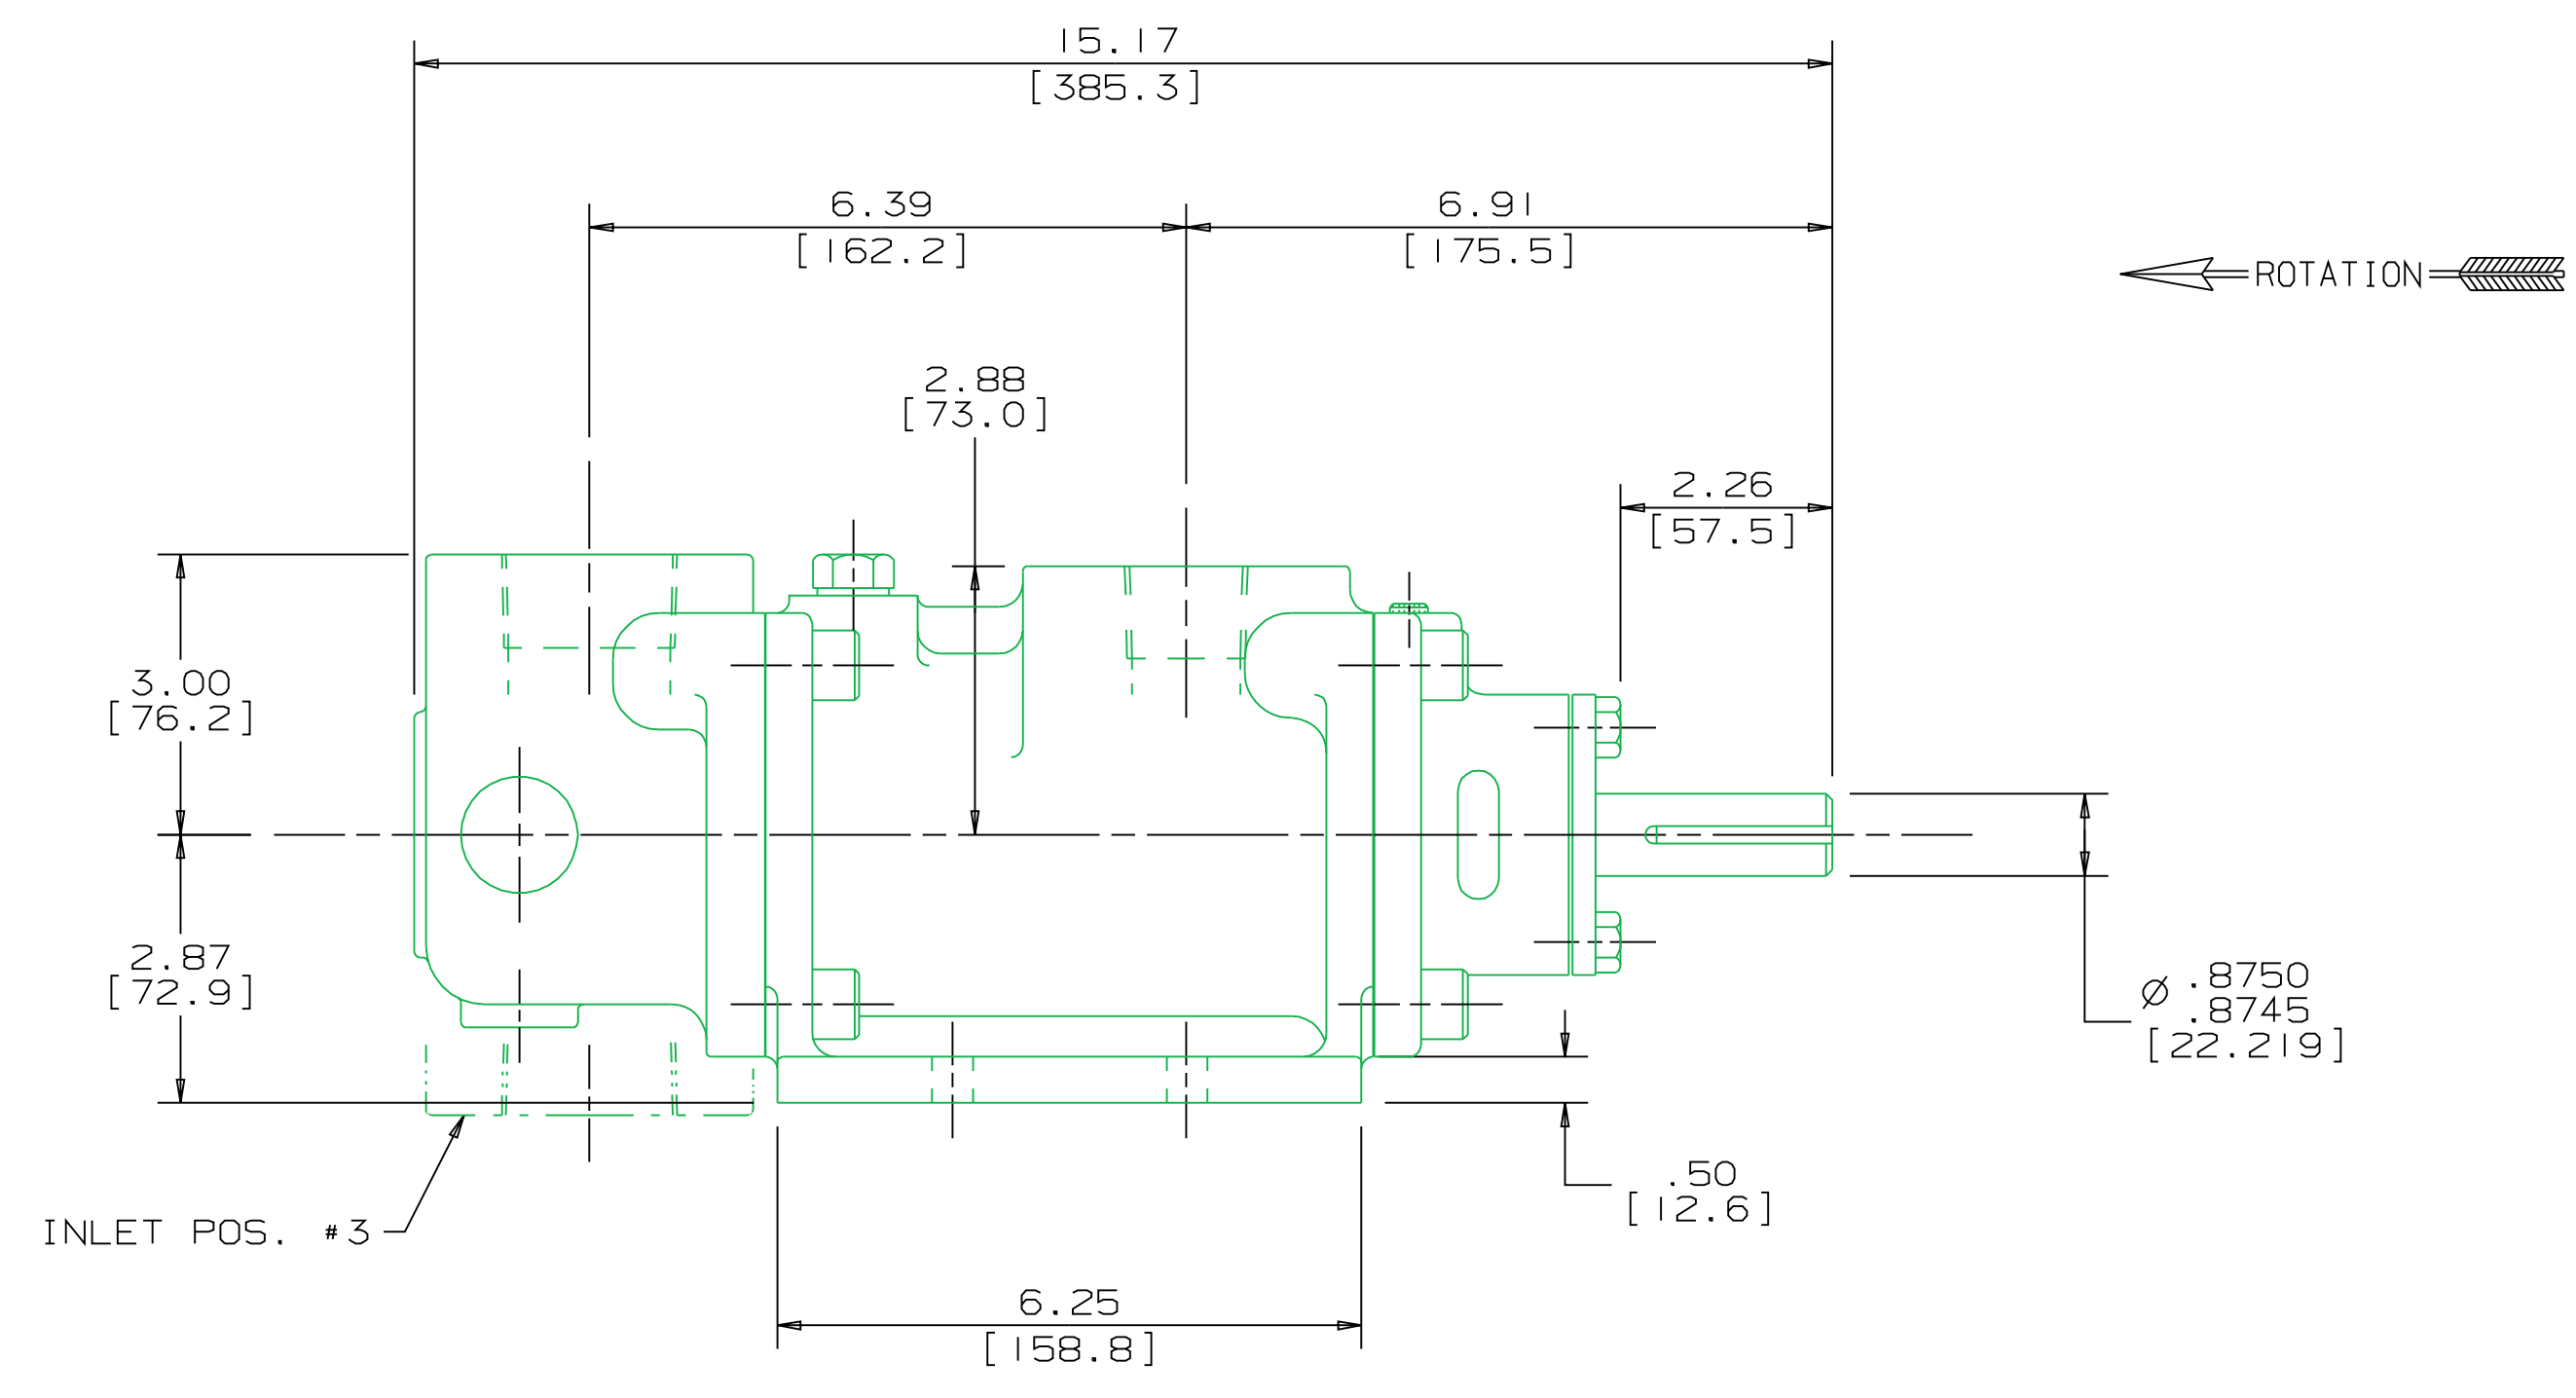

DRAWN	WLV	3-30-95		
CHECKED	WLV	4-6-95		
APPD	MJC	4-6-95		
PROCESS	METHODS		TITLE OUTLINE STANDARD _3D_-118_	
COMMENTS: STANDARD ROTATION IS CLOCKWISE WHEN VIEWED FROM COUPLING END OF PUMP. SUCTION STRAINER AND DISCHARGE RELIEF VALVE MUST BE PROVIDED. ALIGNMENT: UNITS ARE ACCURATELY ALIGNED AT THE FACTORY. ALIGNMENT SHOULD BE CHECKED BEFORE STARTING TO ENSURE THAT IT IS STILL WITHIN .005 [0.13] F.W. PRESTARTING: FLUSH SUCTION PIPING BEFORE CONNECTING PUMP. PRIME AND VENT PUMP. DO NOT START PUMP WITH VALVES CLOSED. READ INSTRUCTION MANUAL FOR DETAILS BEFORE STARTING.			THIRD ANGLE PROJECTION 	F FIRST ORDER 096490
USED ON	3202/112	SCALE	1/2	WEIGHT SEE NOTE 5
				SHEET 1 OF 1